

## ARAIID 2200 FIRMWARE UPDATE

ARAIID 2200 is composed of two major CPUs (Dual CPU design). Each CPU comes with its own firmware respectively.

The 1st CPU is **R.E.C. (Raid Engine Cpu)**. The CPU may be referred as **(Sil)5744**.

### **Please follow the instructions to update the Firmware for R.E.C.**

- Prepare the proper version firmware file for R.E.C.
- Connect ARAID with either **SATA** or **e-SATA** or **USB** cable.
- Launch **[SteelVine Manager](#)** utility to upgrade.

The 2nd CPU is **H.I.C. (Human Interface Cpu)**. The CPU may be referred as **(LPC)2103**.

### **Please follow the instructions to upgrade the Firmware for H.I.C.**

- A **hardware jumper J4** (located at the lower right corner of the rear panel of ARAID) must be set to "**CLOSE**".
- Prepare the proper version firmware file for H.I.C.
- Connect the ARAID's RS-232 port to your PC by either
  - (a) **Traditional RS-232** connector/cable
  - (b) **USB type 9-pin** connector/cable with **proper driver installed**
- Launch **[Flash Magic utility](#)** to upgrade.
- After upgrade completed, "**OPEN**" remove the jumper J4 for ordinary operation.

### **Other Information:**

- ARAID 2200 REC Firmware Upgrade Utility by SteelVine Manager User's Guide & ScreenShots.
- Flash Magic User's Guide & ScreenShot for Firmware Upgrade.
- ARAID 2200 HIC Firmware Upgrade Utility by Flash Magic User's Guide and Screenshots.

### **Noted:**

Accordance has enclosed newest "SteelVine Manager" and "Flash Magic" when product shipped. Or you are also welcome to visit [www.accordance.com.tw](http://www.accordance.com.tw) or [send Email](#) to request most updated utility and associated firmwares.